


4-3 Pre-Stroke Valve Spring

56947J-S1

1 Spring

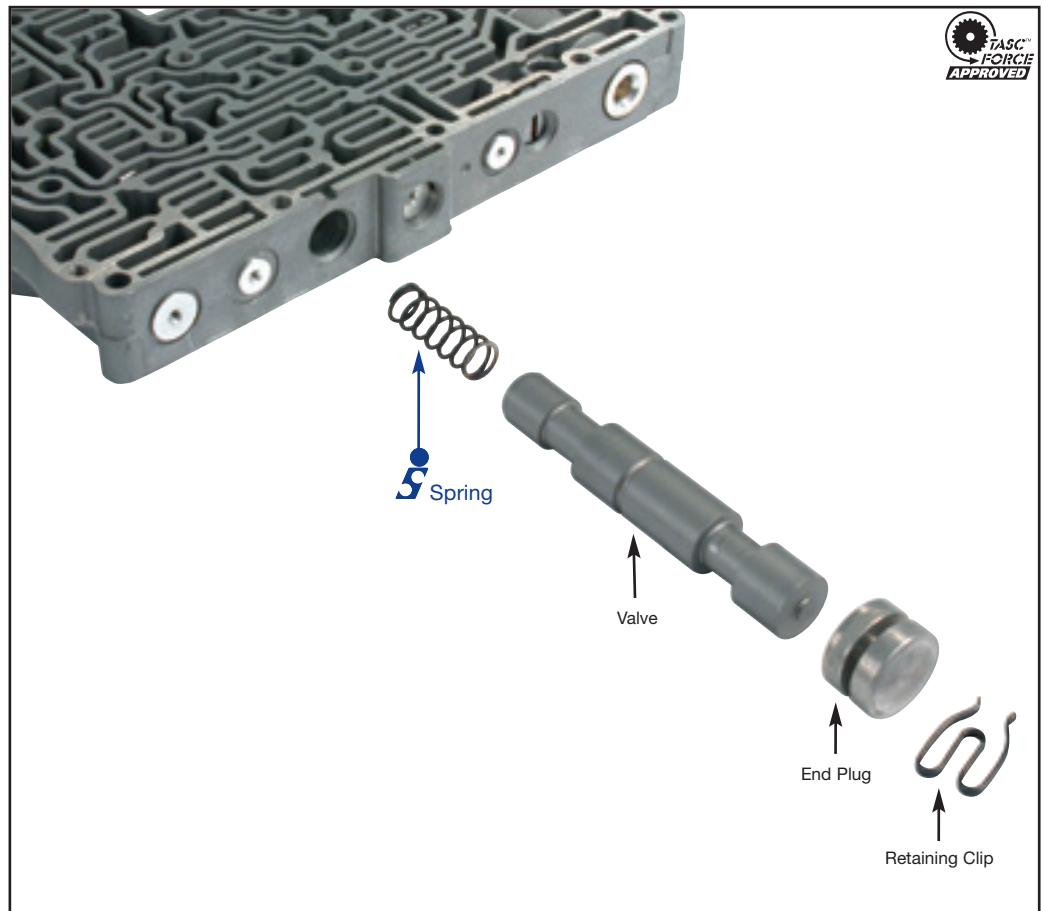

Installation Instructions

1. Remove the OEM spring. If broken, make sure to remove all pieces prior to reassembly.
2. Inspect bore for damage from broken spring.
3. Insert the replacement spring into the valve spring pocket. It is advised to use assembly to retain the spring.
4. Carefully return the OEM valve with spring into the bore, spring first. Be sure the spring does not come out off the spring pocket during installation.
5. Reinstall OEM end plug and retaining clip.
6. Stroke the valve to ensure no raised material is inhibiting free movement of the valve.