

2nd Gear Super Hold Servo Kit

Part No.

22301B-01K

- Cover
- Piston
- Sleeve
- Pin
- Retaining Ring
- Seals/Seal Rings (5)
- O-Rings (3)

Replacement Seal Kit

Part No.

22301B-SK

- Seals/Seal Rings (5)
- O-Rings (3)

Also Available


High Strength Band Strut

22825-01

Accumulator Piston Kit


22841-04K

Chrysler A727, 46/47RH, 46/47/48RE

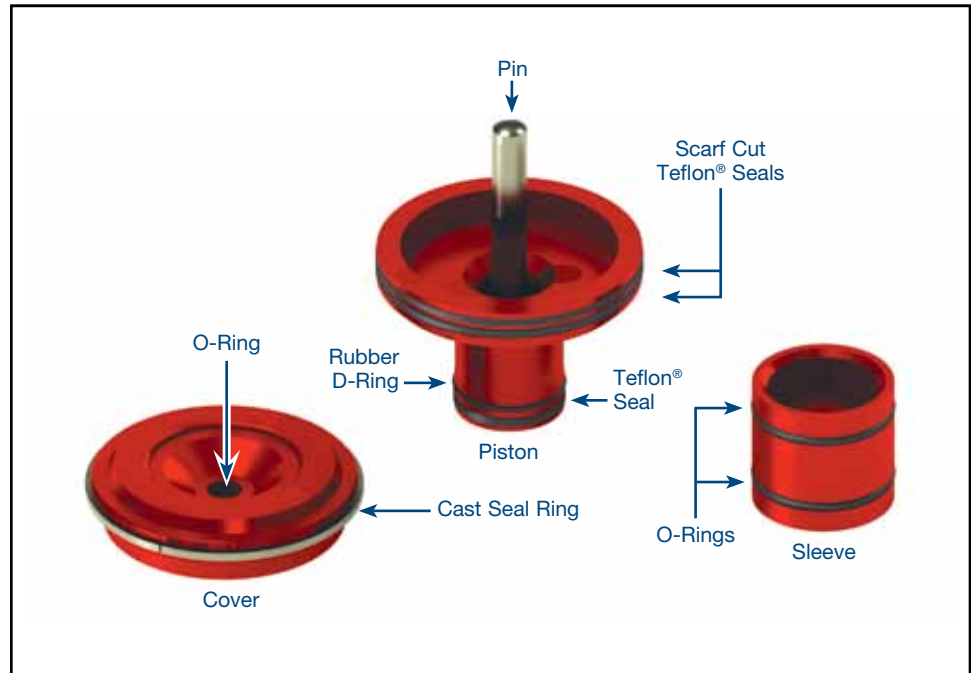

1. Assembly

- Insert the servo pin into the servo piston and pin in place with supplied retaining ring (Figure 1).
- Install the small Teflon[®] seal and the small D-ring seal onto the small diameter of the apply piston as shown below. The Teflon[®] seal goes in the outer seal groove; the D-ring goes in the inner seal groove.

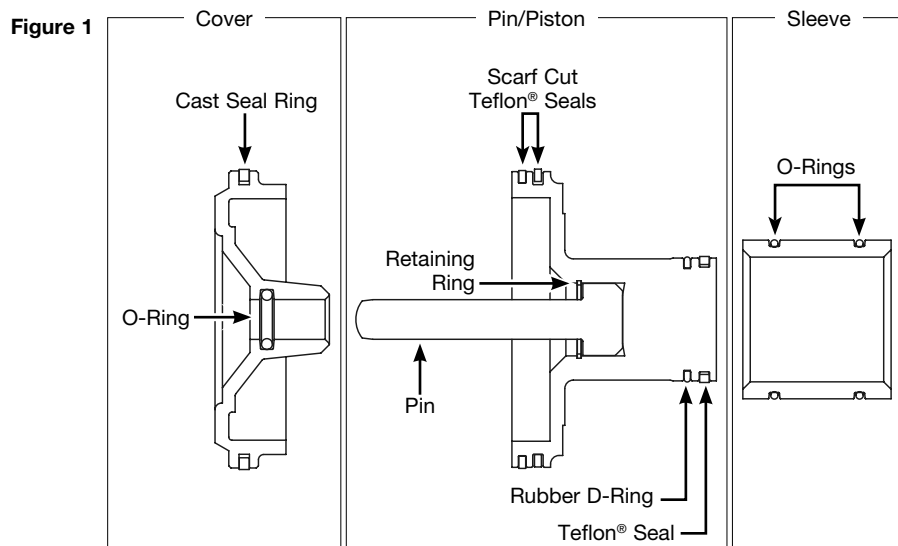

Assembly continued...

- c. Use the sleeve to size the Teflon® seal by installing the sleeve over the Teflon® and rubber seals on the piston.
- d. Install the two large rubber O-rings onto the sleeve.
- e. Install the two large, scarf cut Teflon® seals onto the large diameter of the piston. It is normal for the two grooves to have different depths.
CAUTION: Apply assembly lube to seat the seals.
- f. Install the large cast seal ring onto the cover.
- g. Install the small O-ring into the pin bore of the cover.
- h. Lube the O-ring in the cover, then temporarily install over the piston pin to confirm proper installation of the cover O-ring seal.

2. Installation (with valve body and band strut removed)

- a. Remove the servo cover retaining ring and servo cover.
- b. Remove the servo piston assembly.
- c. Apply assembly lube to the sleeve O-rings, then install the sleeve into the servo bore, making sure it is bottomed out.
- d. Apply assembly lube to the piston seals, then insert the piston into the case and pre-installed sleeve.
- e. Install the servo spring.
- f. Place a mark on the outer face of the cover. Locate the ring end gap of the metal sealing ring so that it lines up with your mark.
- g. Insert the new cover and secure with retaining ring, making sure the retaining ring end gap is 180° from the mark on the cover and the sealing ring end gap.

3. Band Adjustment

Tighten band adjustment screws to 72 in/lb and back off.

Lever	Turns Out
2.5"	2-7/8"
3.8"	1-7/8"
5.0"	1-1/2" to 1-3/4"

Band adjustment specification depends largely on which lever is used. Factory specifications are as follows:

An alternative method that works equally well regardless of which lever ratio is used is to measure the distance between the servo apply pin and the lever. Normal clearance is between .360" and .400" for all OE levers. A 3/8" (.375") spacer can be used as a gauge block for setting this clearance.