

TC Check Valve Kit

98892-06K

- TC Check Valve
- Sleeve
- Spring
- Shim

NOTE: This kit fits several Honda 4/5 speed models. However, model to model, the appearance of valve bodies and the location of the TC check valve bore may vary. The BVGA '03-'07, 3.5L Pilot model is illustrated here. See Honda **98892-06K** Application Chart for a detailed guide.

Also Available

TC Check Valve Kit

98892-10K


See Honda 98892-10K Application Chart at www.sonnax.com for Honda 4/5 speed unit details.

Lube Regulated Pressure Regulator Valve

98892-04K

O-Ringed End Plug Kit

98892-01K

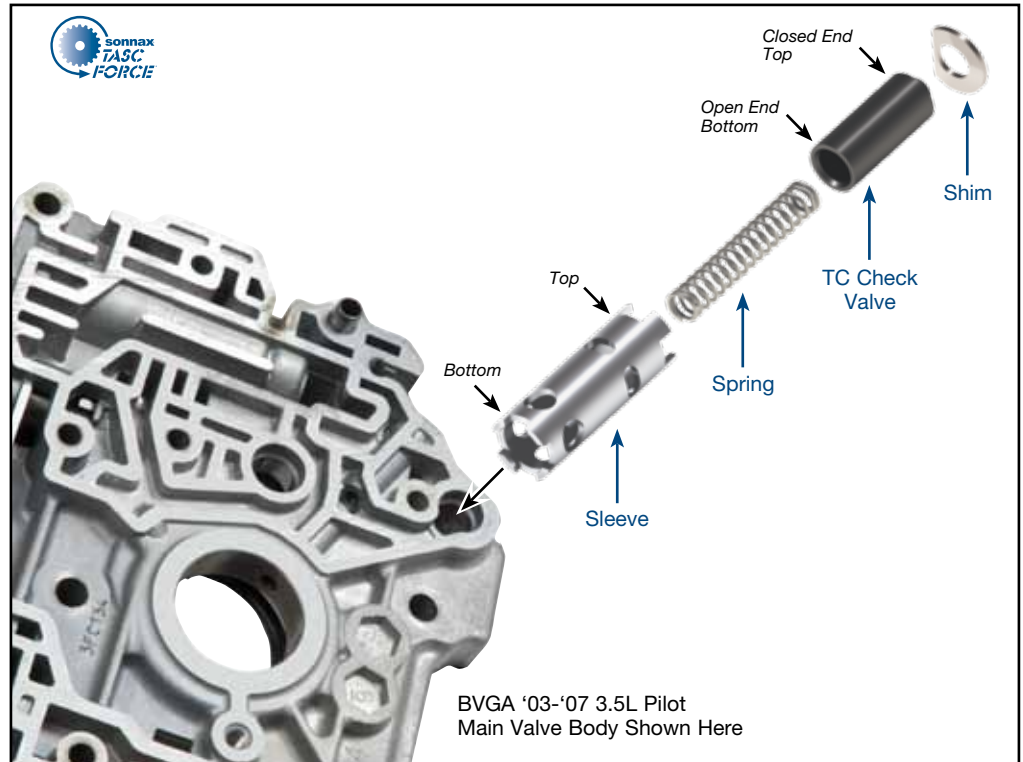

Honda 4/5 Speed 98892-06K Application Chart				
Make	Model	Year		Trans. Code
		From	To	
Acura	3.0CL	1996	2000	M7ZA
Acura	3.2CL	2001	2006	BGFA
Acura	3.2CL	2001	2006	MGFA
Acura	3.2TL	1999	1999	B7VA
Acura	3.2TL	2000	2003	M7WA
Acura	3.2TL	2001	2003	B7WA
Acura	MDX	2001	2002	MGHA
Acura	MDX	2001	2002	BGHA
Acura	TL	2004	2008	BDGA
Honda	Accord	1996	2000	B7ZA
Honda	Accord	1998	2002	B7XA
Honda	Accord	2003	2007	BAYA
Honda	Accord	2003	2007	MAYA
Honda	Odyssey	1999	2001	B7TA
Honda	Odyssey	1999	2001	B7YA
Honda	Odyssey	2002	2004	BYBA
Honda	Odyssey	2005	2007	BGRA
Honda	Odyssey	2005	2007	PGRA
Honda	Pilot	2003	2007	BVGA
Honda	Pilot	2003	2007	PVGA
Honda	Pilot	2003	2007	BVLA
Honda	Pilot	2003	2007	PVLA


NOTE: The Sonnax TC check valve and sleeve assembly is designed to fit in the main valve body, but will extend into the torque converter housing as well (Figure 1). Once the main valve body and regulator valve body are assembled to the torque converter housing, the sleeve should occupy the entire height between those castings.

1. Disassembly

- a. Separate the main valve body section from the torque converter housing and the other valve body sections.
- b. With the main valve body free, the OE TC check valve and spring can be removed from the bore by sliding them out.

2. Installation & Assembly

- a. Be certain all debris has been removed from the valve bore and the main valve body.
- b. Assemble the main valve body section onto the torque converter housing.
- c. Install the Sonnax sleeve with the larger castellations toward the top of the main valve body and the round holes toward the bottom (see main photo above).

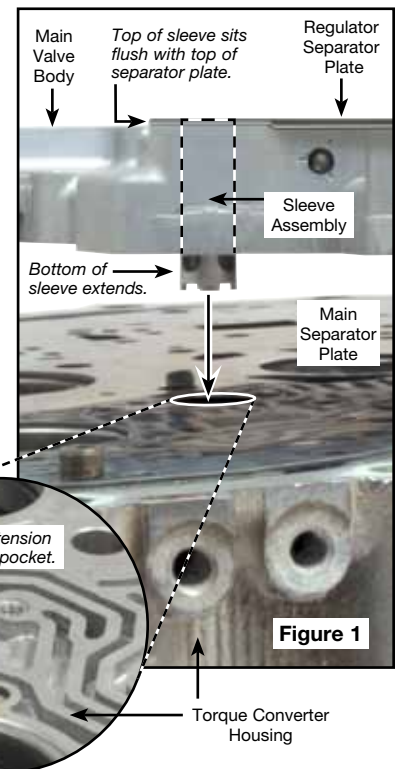

Honda 4/5 Speed

TC Check Valve Kit

PART NUMBER 98892-06K

INSTRUCTION DATA SHEET

2. Installation & Assembly (continued)

- d. Insert the Sonnax spring into the sleeve.
- e. Install the Sonnax TC check valve so that the open spring pocket is facing the bottom of the main valve body (see main photo on page 1), the side where the pump gears reside.
- f. Install the Sonnax shim onto the regulator valve body, orienting the shim in the casting as shown (**Figure 2**). Shim can be held in place with a small amount of TransJel™ to aid in assembly. Install regulator body while making sure the shim stays in place.

