

## Torque Converter Clutch Solenoid Snout


### 77942-01K

1 TCC Solenoid Snout  
1 O-Ring

### 77942-02K

1 TCC Solenoid Snout with  
Anti-Drainback Valve  
1 O-Ring

**Note:** U.S. Patent No. 6,840,361.

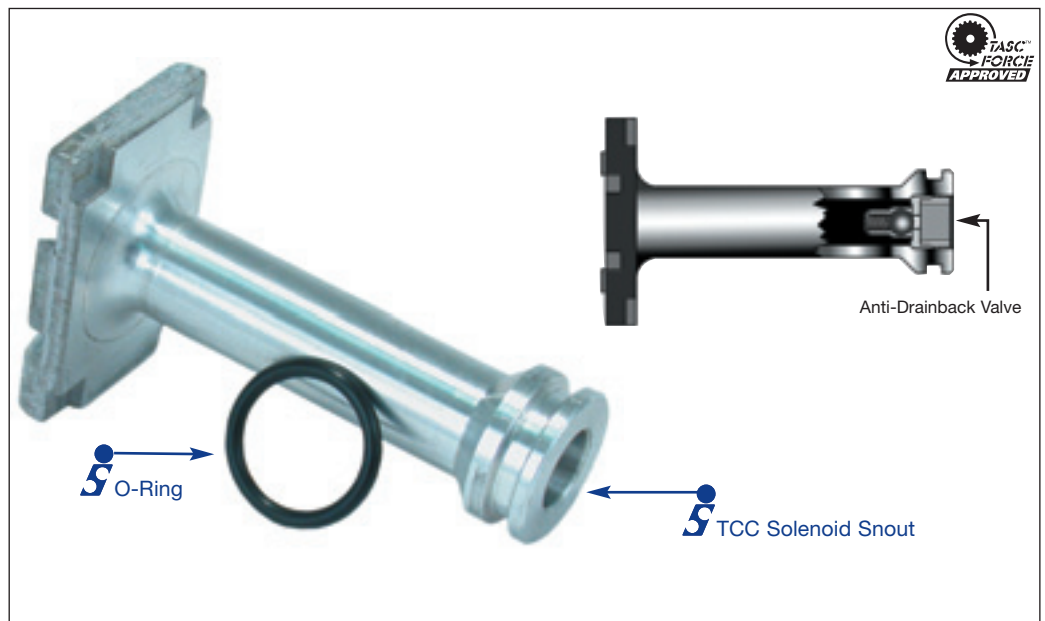

### Instructions

1. Remove the plastic OEM solenoid snout by unbending the four metal tabs that secure it.
2. Discard the plastic snout, and make sure to retain the steel plunger valve.
3. Place the new solenoid snout on the OEM solenoid base and bend the bracket tabs to secure the snout.
4. If you are using the Sonnax solenoid with anti-drainback valve (77942-02K) it is necessary to remove the OEM plastic drainback valve (see photo below) from the pump and replace it with the orificed cup plug provided.
5. Press the cup plug into the pump and then stake it in place.

