

## Lube Regulator & Converter Relief Valve Springs


### 37000-01K

1 Lube Regulator Valve Spring 1.250"

1 Converter Relief Valve Spring 1.750"

**Notes:** These springs should be replaced as a pair, due to the pressure effects on each valve.

These springs work in 2003 & earlier units only. These units can be identified by counting the solenoids: The earlier units have 6 solenoids. Do not use in 2004 & up (7-solenoid) units.

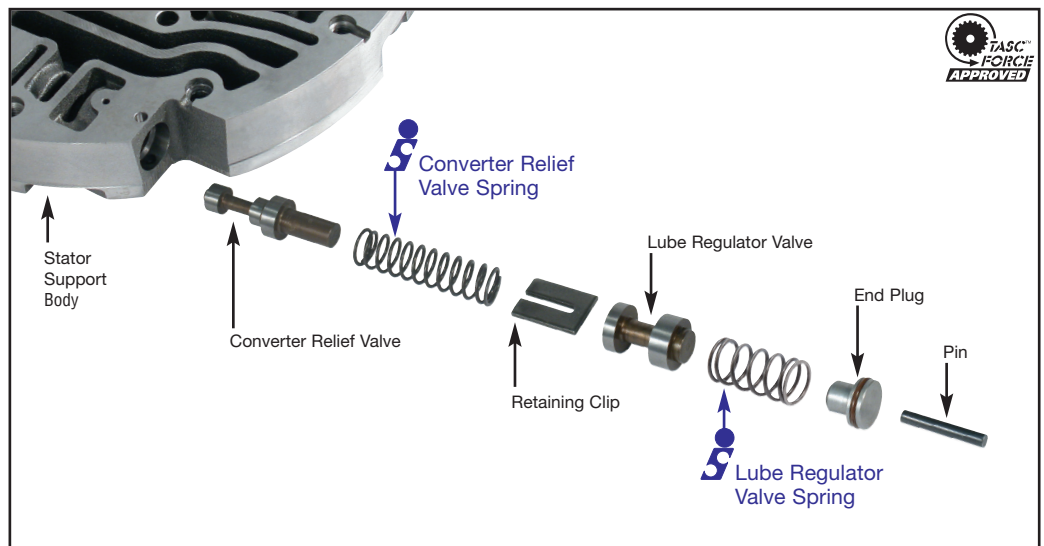

### Instructions:

1. Remove retaining pin, end plug, spring and lube regulator valve from the stator support body. Save all OEM parts except the spring.
2. Remove retaining clip, spring and converter relief valve. Save all OEM parts except the spring.

**Note:** Make sure stator support body bore was not damaged by broken spring pieces.

3. Install OEM converter relief valve, the long Sonnax spring and OEM retaining clip, as shown above.
4. Install OEM lube regulator valve, the short Sonnax spring and OEM end plug and pin.