

Throttle Valve Plunger & Sleeve Kits

77966-93K OEM "#93"

77966-94K OEM "#94"

77966-94MK High Performance


Each includes the following

- 1 Plunger
- 1 Sleeve
- 1 Spring

Also Available

77968-01K

5 TV Plunger Springs

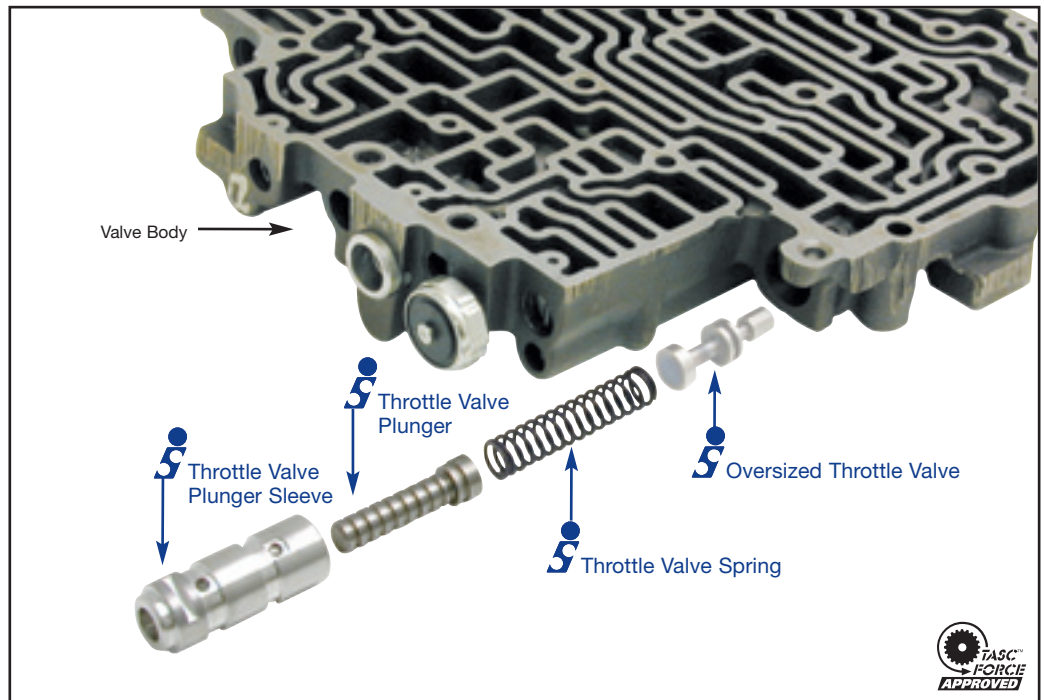

Installation Instructions

Be sure to match OEM plunger to Sonnax part number to ensure proper operation. Installing the wrong part can result in throttle pressure that is too high or low.

1. Remove the original throttle valve plunger, sleeve and spring from the valve body and discard.
2. Lube replacement plunger and sleeve.
3. Insert the plunger and spring into the sleeve, in the orientation shown.
4. Push this assembly into the valve body bore, just far enough to reinsert the roll pin.
5. The grooved diameter of the throttle valve plunger should be sticking out of the valve body bore.